

Modem Switch Settings (US Robotics)

Acroprint recommends using the US Robotics 28,800 or 56,000 data/fax external modems for remote communications to all Acroprint Data Collection Terminals.

The following are the HOST modem DIP Switch settings:

1. UP – Data Terminal Ready Normal
2. UP – Verbal Result Codes
3. DOWN – Display Result Codes
4. UP – Echo Offline Commands
5. UP – Auto Answer on First Ring
6. UP – Carrier Detect Normal
7. UP – Load NVRAM Defaults
8. DOWN – Smart Mode

Note: HOST refers to the modem attached to the PC where the database is installed.

The following are the REMOTE modem DIP Switch settings:

1. DOWN – Data Terminal Ready Override
2. UP – Verbal Result Codes
3. DOWN – Display Result Codes
4. UP – Echo Offline Commands
5. UP – Auto Answer on First Ring
6. UP – Carrier Detect Normal
7. DOWN – Load Factory Defaults
8. DOWN – Smart Mode

Note: REMOTE refers to the modem attached to the Acroprint Data Collection Terminals.